

INSTRUCTIONS



41669 Date Street, Suite 101
Murrieta, CA 92562
phone: 951.677.7424
fax: 951.677.7334
email: sales@rainbowprecisionproducts.com
web: www.rainbowprecisionproducts.com

Type E Bearings

with Timken® Tapered Roller Bearings

At Moline, our goal is to provide you with the most reliable products, helpful service, and expert support. We work to make our instruction sheets clear and easy to understand. But if you have further questions, please feel free to call 800.407.8514 or email support@molinebearing.com. We are here to help.

INSTALLATION INSTRUCTIONS

- 1 Clean shaft and bore of bearing.
- 2 Slip bearing into position.
- 3 Tighten set screws firmly.
- 4 Bolt bearing to support, using shims where necessary to align bearing. The effort required to turn the shaft should be the same before and after bolting bearing to the support.

LUBRICATION INSTRUCTIONS

Storage or Special Shutdown—If exposed to wet or dusty conditions or to corrosive vapors, extra protection is necessary: add grease until it shows at the seals; rotate bearing to distribute grease; and over the bearing. After storage or idle period, add a little fresh grease before running.

High Speed Operation—In the higher speed ranges, too much grease will cause overheating. The amount of grease that the bearing will take for a particular high-speed application can only be determined by experience (see “Operating Temperatures” below). If excess grease in the bearing

causes overheating, it will be necessary to remove grease fitting (also drain plug when furnished) to permit excess grease to escape. The bearing has been greased at the factory and is ready to run. When establishing a re-lubrication schedule, note that a small amount of grease at frequent intervals is preferable to a large amount at infrequent intervals.

Operation in Presence of Dust, Water, or Corrosive Vapors—Under these conditions the bearing should contain as much grease as speed will permit, since a full bearing with consequent slight leakage is the best protection against entrance of foreign material. In higher speed ranges too much grease will cause overheating (see “High Speed Operation” above). In lower speed ranges, it is advisable to add extra grease to a new bearing before putting into operation. Bearings should be greased as often as necessary (daily if required) to maintain a slight leakage at the seals.

Normal Operation—This bearing has been greased at the factory and is ready to run. The following table is a general guide for re-lubrication. However, certain conditions may require a change of lubricating periods as dictated by experience. See “High Speed Operation” and “Operation in Presence of Dust, Water, or Corrosive Vapors” above.

Operating Temperature—Abnormal bearing temperature may indicate faulty lubrication. Normal temperature may range from “cool to warm to the touch” up to a point “too hot to touch for more than a few seconds,” depending on bearing size and speed, and surrounding conditions. Unusually high temperature accompanied by excessive leakage of grease indicates too much grease. High temperature with no grease showing at the seals, particularly if the bearing seems noisy, usually indicates too little grease. Normal temperature and a slight showing of grease at the seals indicate proper lubrication.

Kind of Grease—Many ordinary cup greases will disintegrate at speeds far below those at which Moline bearings will operate successfully if proper grease is used. Moline bearings have been lubricated at the factory with No. 2 consistency lithium base grease that is suitable for normal operating conditions. Re-lubricate with lithium base grease or a grease that is compatible with original lubricant and suitable for roller bearing service. In unusual or doubtful cases, the recommendation of a reputable grease manufacturer should be secured.

Special Operating Conditions—Refer acid, chemical, extreme or other special operating conditions to the Moline Bearing Company, 800.242.4633.

LUBRICATION GUIDE

Read text above before establishing lubrication schedule.

Hours Run Per Day	8	16	24
1 to 250 RPM	12 weeks	12 weeks	12 weeks
251 to 500 RPM	12 weeks	7 weeks	5 weeks
501 to 750 RPM	10 weeks	5 weeks	3 weeks
751 to 1000 RPM	7 weeks	4 weeks	2 weeks
1001 to 1500 RPM	5 weeks	2 weeks	1 week
1501 to 2000 RPM	4 weeks	2 weeks	1 week
2001 to 2500 RPM	3 weeks	2 weeks	1 week
2501 to 3000 RPM	2 weeks	1 week	1 week

TECHNICAL SUPPORT

Call 800.407.8514, or email at support@molinebearing.com

IMPORTANT NOTICE: Because of the possible dangers to person(s) or property from accidents that may result from the use of products, it is important that correct procedures be followed: Products must be used in accordance with the engineering information specified in the catalog. Proper installation and maintenance operation procedures must be observed. The instructions in the instruction manuals must be followed. Inspections should be made as necessary to ensure safe operation under prevailing conditions. Proper guards and other suitable safety devices or procedures as may be desirable or as may be specified in safety codes should be provided, and are neither provided by Moline nor are the responsibility of Moline.



MOLINE BEARING CO